PREMIER®

MANUAL DE INSTRUCCIONES
MOTOCICLETA ELÉCTRICA
PARA NIÑOS
KB-901

ESTIMADO CLIENTE

Felicitaciones por su compra!
Por favor lea cuidadosamente este manual, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ESPECIFICACIONES TÉCNICAS

- Batería: Batería seca sellada de 6V 4Ah
- Apto para niños de 3 a 7 años de edad.
- Capacidad máxima de carga: 30 Kg.
- Velocidad: 3 Km/h
- Dimensiones: 87*39*62cm (Luego de ensamblada)
- (Para el cargador) Entrada: AC220V/50-60Hz; Salida: DC 6V/500mA
- El motor puede operar continuamente durante 2 horas luego de haber cargado la batería completamente durante 10 a 12 horas.

OPERACIÓN

- Presione el pedal mostrado en la figura 8, para avanzar, la unidad se moverá mientras lo mantenga presionado.
- Use el selector de AVANCE / RETROCESO para dirigir la unidad hacia delante o atrás respectivamente. Las luces delanteras y traseras se encenderán cuando esté en movimiento
- Al presionar el botón de “Teléfono” la alarma sonará.
- Para la función de luz de la alarma, necesita usar 2 baterías alcalinas de 1.5V tipo AAA instaladas en el “Porta-juguetes”

CONTENIDO DEL PAQUETE

- Juego de partes de rueda frontal que incluye, una barra de hierro, dos hebillas de hierro, guardafango y dos cubiertas para rueda principal.
- Una bolsa que incluye un panel, un manual de operaciones, una luz frontal, hebillas fijas, un parabrisas y un juego de tornillos.
- Un estructura con cargador y batería
- Un juego de partes de cabezal de la moto
- Un porta-juguetes
- Un Cojín

ENSAMBLE

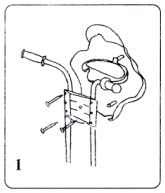

1. Acople las luces frontales con el cabezal.
2. Acople el parabrisas en el tenedor frontal.
3. Ensamble la rueda en el tenedor frontal.

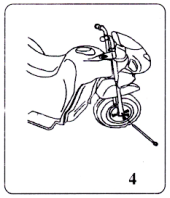

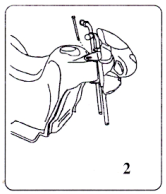

4. Ensamble las partes del cabezal y la estructura
5. Use un tornillo para fijar el soporte de la caja y la parte posterior de cuerpo del motor.
6. Ensamble el cojín en el cuerpo del motor.

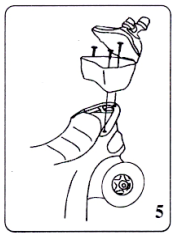

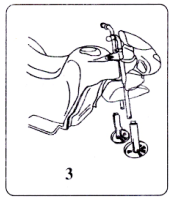

7. Ponta la caja sobre el soporte, y use 3 tornillos para fijarla.

NOTAS SOBRE LA RECARGA

1. Antes de operar la motocicleta por primera vez, abra el asiento para conectar los cables de la batería.
   El cable rojo de la batería con la Terminal roja y el cable negro con la Terminal negra. Luego póngalos al interior de la cubierta blanca para evitar fallos.
2. El conector de recarga esta en la parte posterior de la estructura. el tiempo de recarga no debe exceder las 15 horas para evitar el sobrecalentamiento del cargador.
3. Las baterías sale totalmente cargada de la fábrica, sin embargo, para asegurar la estabilidad del voltaje, cárguela por 4 o 6 horas antes de usarla.
4. Cargue la batería cuando la moto se torne lenta.
5. Si planea no usar la unidad durante mucho tiempo, cargue la batería completamente antes de guardarla, y recargue cada 3 meses para asegurar la longevidad de la batería.
6. Durante la recarga el cargador puede calentarse un poco. Esto es normal; de otra manera significa que la batería, el cargador o el fusible se han dañado.
7. La conexión de la batería o el proceso de recarga debe ser realizado por un adulto. No permita

que los niños toquen el cargador durante la recarga.
8. Sólo se puede utilizar baterías iguales o equivalentes a la recomendada.
9. Revise frecuentemente los cables, el compartimiento sellado, los conectores y otras partes de la batería. Si encuentra algún desperfecto o rotura no use la motocicleta hasta repararla.
10. Deshágase de las baterías según lo indican las normas locales, no las queme, descomponga etc..
11. El ensamble de la unidad debe ser hecho por adultos
12. La recarga debe ser realizada por adultos, los niños NO deben hacerlo.
13. Cuando cargue la batería, el indicador verde del cargador se iluminará. Si el indicador no se ilumina, detenga la carga inmediatamente.

REEMPLAZO DEL FUSIBLE

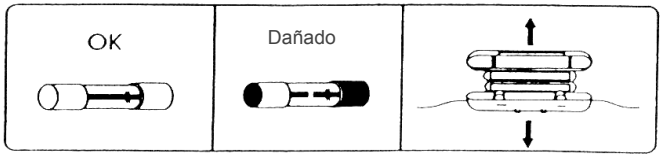

PRECAUCIONES

1. El ensamble de la unidad debe ser hecho por adultos
2. Los niños deben ser supervisados durante la operación de la unidad. Esta moto no es un vehiculo de transporte, está prohibido su uso en calles y carreteras publicas, cerca de lagos, cuestas u otros lugares peligrosos.
3. No ajuste el selector de avance y retroceso mientras se encuentra en movimiento, esto puede dañar la unidad. Espere a que el motor esté detenido para hacerlo.
4. La batería debe ser recargada por adultos nunca por niños.
5. No lave la unidad con agua, use un paño suave.
6. No sobrecargue la unidad, el máximo son 25Kgs.
7. No debe ser usada por niños menores de 3 años.
8. Detenga la unidad y cárguela inmediatamente cuando se ponga lenta o se detenga.

GUÍA DE SOLUCIÓN DE PROBLEMAS

PROBLEMA	SOLUCIÓN
La moto no se mueve	Revise si el fusible esta dañado. Si es así reemplácelo
	Revise si las conexiones están bien hechas y firmes.
	Revise si el motor o caja de cambios están dañadas
	Revise si hay corto circuito
El motor se mueve lentamente	Revise si la batería esta completamente cargada por 8 a 12 horas.
	Revise si la caja de cambios esta dañada
No se puede cargar	Revise si el fusible esta dañado. Si es así reemplácelo
	Revise si el cargador o batería están dañados
Ruidos inusuales	La caja de cambios puede estar dañada
	Las ruedas están muy llenas de piedras

PREMIER®

Model KB-901
CHILDREN'S ELECTRIC MOTORCYCLE
OPERATION INSTRUCTIONS

You are welcome to choose children's electric motorcycle produced by our factory. Please read this instruction carefully before operation and correctly operate this product in accordance with the instruction. Please always keep this operation instructions properly for reference in the future.

Main Technical Specifications:

- Sealed dry type battery 6V/4.0AH
- Suitable age: children of 3-7 years old
- Maximum loading capacity: 30Kgs
- Speed: 3KM/HR
- Motorcycle size after assembling : 87*39*62cm
- (For charger) Input: AC220V/50-60Hz; Output: DC 6V/500mA
- The duration of battery: The motorcycle can go continuously for 2 hours after fully charging the battery for 10-12 hours.

Operation and Function

- Stepping on the pedal (shown in picture 8), the motorcycle will move. And it will stop when we release the pedal.
- Forward/Backward switch: press the switch forward , the motorcycle will go forward. otherwise it will go backward. The front light and back light will shine when the motorcycle is moving.
- When we press down the phone button, alarm signal will sound.
- For alarm light, we need to use 2 pcs 1.5V alkalescent battery (AAA) installed in the rear toy box.

List of parts packed:

- One set of front wheel parts includes one wheel, one iron bar, two iron buckles, one front fender and two covers for front wheel.
- One fitting bag includes one panel, one operation instructions, one headlight, two fix buckles, one windshield, one set of screws.
- One set of body with charger and battery.
- One set of head parts of motorcycle.
- One set of rear toy box.
- One seat

ASSEMBLE INSTRUCTION FOR TYPE KB-901 BABY CAR

1.PUT THE HEADPARTS AND FRONT FORK TOGETHER.□PICTURE 1□

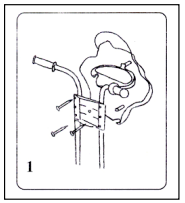

2. PUT THE HEADPARTS AND BODY TOGETHER. □PICTURE 2□

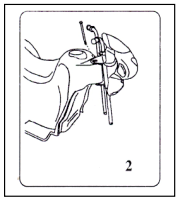

3. PUT THE FRONT MUDGUARD AND WHEEL COVEI THE FRONT FORK □PICTURE 3□

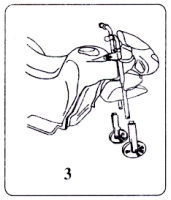

4.PUT THE WHEEL ON THE FRONT FORK □PICTURI

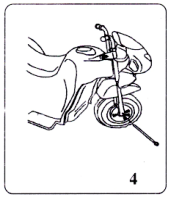

5.PUT THE BOX ON THE BACK OF BODY□PICTURE 5

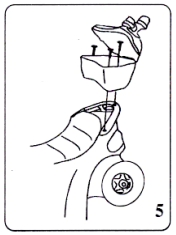

POINTS OF ATTENTION FOR CHARGING

1. Before operating for first time, please open the seat and connect the power wires with the wires of storage battery--- red side to red side and black side to black side, then put them inside white cover to avoid short circuit or malfunction .
2. Charging socket is at the back side of body. Continuous charging shouldn't exceed 15 hours.
3. When the product is ex-factory, the voltage of the storage battery have tallied with rated full load. But in order to ensure the stability of voltage, always charge it for 4-6 hours firstly when you purchase it.
4. Please charge the battery when speed of motorcycle becomes slow.
5. If we prepare to store the motorcycle for a long time, always charge it fully. Then charge it each 3 months in order to ensure the service life of storage battery.
6. The charger and battery will have thermal appearance during the course of charging, it is normal reaction.
7. Connection wires of storage battery or charging the battery must be operated by adult. Don't let children touch the charger when charging.
8. User can only choose the same recommended storage battery or equivalent.
9. Frequently check the wire of charger, plug and other parts. If there is any breakage, please repair it firstly before operation.
10. Useless battery could be put away by adult. Don't burn or disassemble it. Please contact the local wastrel-recycle company to deal with it.
11. The assembling of baby car should be completed by adults.
12. Charging battery should be done by adults. Children are not allowed to charge the battery.
13. When charging, the green indicator light of the charger will shine. If the indicator light is not shining when charging, please stop charging the battery immediately.

REPLACE THE FUSE

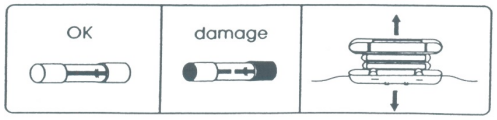

SAFETY NOTICE:

1. The motorcycle should be assembled by adults. We can only use the motorcycle after checking everything in good condition.
2. The motorcycle should be used under the guide of adult. This motorcycle is not a traffic car. It's prohibited to operate it in street, road , near the pond, on the slope and in other danger places. Motorcycle can't be used in water or in the rain. It is only suitable to ride the motorcycle on open, broad, smooth, safe ground.
3. Please don't change the forward and backward switch when it moves on. The forward and backward switch should be changed when the motorcycle stops. Or it will cause the damage of gear and motor.
4. The battery must be charged by adult. Don't let the children touch it when charging.
5. Don't wash the motorcycle with water, please clean it with soft cloth.
6. The maximum loading capacity for motorcycle is 25kgs, overload is strictly prohibited.
7. Children less than 3 years old are not allowed to use the motorcycle.
7. Please stop the motorcycle and charge it at once when it suddenly moves slowly or stops.

ELIMINATE MALFUNCTION:

Malfunction	Check and Eliminate
Motorcycle can't move.	1. Check whether the fuse breaks or not. If so, change the fuse. Fuse is installed in the fuse box of outlet of battery. 2. Check whether the outlet of battery or other connection wires are connected well or not. 3. Check whether the motor or gear box are damaged or not. 4. Check whether it's due to short circuit or not.
Motorcycle moves slowly.	1. Check whether the battery is fully charged for 8-12 hours or not. 2. Check whether the gearbox is damaged or not.
Motorcycle cannot be Charged	1. Check whether the fuse breaks or not. If so, change the fuse. 2. Check whether the charger or batteries are damaged or not.
Unusual sound	1. Gear box may damage. 2. Too many sands in the wheels.